001STM000 / FDU-S030

001MG024 (1) Spring washer

(2)

(3)

(4)

(5)

(6)

(7)

(8)

(9)

(10)

(12)

SLIPPER CLUTCH KIT **DUCATI ORIGINAL**

INSTALLATION INSTRUCTIONS

- Mount the basket on the engine seat and fix it using the 8 screws of the original clutch (ONLY FOR STM BASKET).
- Insert the o-ring supplied with the original clutch in the seat of the carter axle box (14). 0F10S140A20A003
 - Position the gear shaft bushing (14) into the carter seal and push it till reaches the complete stop.
 - If installing with Ducati OEM basket fit the (13) spacer (3 mm)
 - If installing with STM basket (Z12 or Z48) fit the (13) spacer (1,5 mm)
 - Insert the correct washer on the gear shaft.
 - -Assemble hub kit: put progressive engagement plate (10) on hub (12), with the step facing up, put it correctly into its seats, then check that pushing on one side the other side lifts up.
 - Put 6 steel balls (9), into the grooves with some grease.
 - Fix the clutch drum (8) on the clutch hub (12) at rest position.
 - Put with some grease the drum stopper hub (7) on hub (12).
 - Insert the hub pack on the gear shaft.
- 0F30S140E24008A Insert the spider spring (6) in its own seat.
- Spider spring washer Insert the spider spring washer (5).
 - Insert the toothed washer (4) with the convex side facing up. Use the
 - (3) nut for M25 drive shaft threads.
 - Tighten using the dynamometric tool at the torque suggested by the manufacturer.
 - -Insert clutch plates starting with a sintered plate and ending with a steel plate. The total height of the plates stack must be between 36
- 0F30S140F240009 Insert in the inner part of the pressure plate (2), the ball bearing and the clutch pushrod pin of the original clutch.
 - Position the pressure plate (2) on the clutch drum (8) and insert the original clutch springs in the seats of the pressure plate.
 - Mounting the spring washer (1) using the screws of the original clutch.



Clutch pusher plate

0F30S140F240013

M25 nut

0F30S140R240013

M20 nut

901RD027

Toothed washer

001MG017

Spider spring

Drum stopper hub

NB: Once completed the assembly, repeatedly operate the clutch lever, checking that the pressure plate performs correctly the opening and closing movements. For a road use of the clutch you have to check clutch plates every

001MG025 Steel balls

Please verify that the clutch plates thickness is between 36,5 mm - 35,0 mm. If it is inferior to 35,0 mm please replace a 1,5 mm steel plate with a

For a racing use of the clutch we suggest to check the clutch plates thickness frequently.




0

0

0

0F10S140A200055

Progressive engagement steel plate

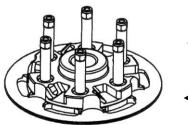

0F3SR450G220054 (11)Steel rods

0F30S140A20001E Hub

001MG019*or (13)0D1SR140C220045 Spacer*

> 001MG028 (14)Gear shaft bushing

- IN THIS SHEET ARE REPORTED THE DIRECTIONS TO PERFORM CORRECTLY THE CLUTCH ASSEMBLY OPERTIONS.
- STM RESERVES THE RIGHT, WITHOUT NOTICE, TO INTRODUCE ANY TECHNICAL CHANGE WHENEVER DEEMED IT TO BE NECESSARY TO IMPROVE FUNCTION AND QUALITY OF THE

ASSEMBLY OPERATIONS MUST BE PERFORMED BY A SKILLED TECHNICIAN AND MUST BE

- ASSEMBLY OPERATIONS MUST BE PERFORMED BY A SMILLED TECHNICIAN AND MOST BESCRUPULOUSLY OBSERVED.
- BEFORE MOUNTING THE CLUTCH MAKE A COMPLETE INSPECTION OF THE MOTORBIKE
COMPONENTS, IN ORDER TO VERIFY THE POSSIBLE PRESENCE OF FAULTS OR ANOMALIES
ON THE VEHICLE.
- MAKE SURE THAT THERE ARE NO MISSING/DAMAGED PARTS IN THE CLUTCH KIT.
- SOME PARTS OF THE CLUTCH AND ITS COMPONENTS CAN HAVE SHARP SURFACE: HANDLE
WITH CAPE

WITH CARE.

- SOME COMPONENTS OF THE CLUTCH, BECAUSE OF THEIR SMALL DIMENSIONS CAN BE SWALLOWED: KEEP AWAY FROM CHILDREN.



- * The spacer depends by the basket used:
- Ducati OEM Basket: cod. 0D1SR140C220045 (3 mm)
- STM Basket: cod. 001MG019 (1,5 mm)